



**MANUAL DE INSTRUCCIONES
CAR-AUDIO C/LCD Y VIDEO (3")
SCR-5132TFT**



ESTIMADO CLIENTE





Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

NOTA SOBRE LA INSTALACIÓN	2
DESCRIPCIÓN	2
CONTROL REMOTO	3
INSTRUCCIONES DE OPERACIÓN	4
OPERACIÓN DE MP3	4
FUNCIÓN BLUE-CONNECT	¡Error! Marcador no definido.
PARTES	5
RESOLUCIÓN DE PROBLEMAS	5
ESPECIFICACIONES	6

	PRECAUCIÓN RIESGO DE CHOQUE ELÉCTRICO , NO ABRA	
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
 	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.</p> <p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiarmundo.com
E-mail:	servicioalcliente@premiarmundo.com


NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

NOTA SOBRE LA INSTALACIÓN

- La unidad está diseñada para un sistema de operación tierra negativo de 12-14V DC únicamente.
- Asegúrese de que el vehículo está conectado a un sistema de tierra negativo de DC 12V.
- La terminal negativa de la batería debe desconectarse antes de hacer las conexiones, para reducir el riesgo de daño a la unidad debido a cortocircuito.
- Asegúrese de conectar los cables correctamente según el color. Las conexiones incorrectas pueden hacer que la unidad funcione incorrectamente o se dañe el sistema eléctrico del vehículo.
- Asegúrese de conectar los parlantes teniendo en cuenta las polaridades positiva y negativa.
- No bloquee las rejillas de ventilación o el panel del radiador para evitar sobrecalentamiento.
- Después de instalar y utilizar la unidad, presione el botón Reset en el panel frontal con un objeto puntiagudo (como la punta de un esfero) para reiniciar la unidad.


DESCRIPCIÓN

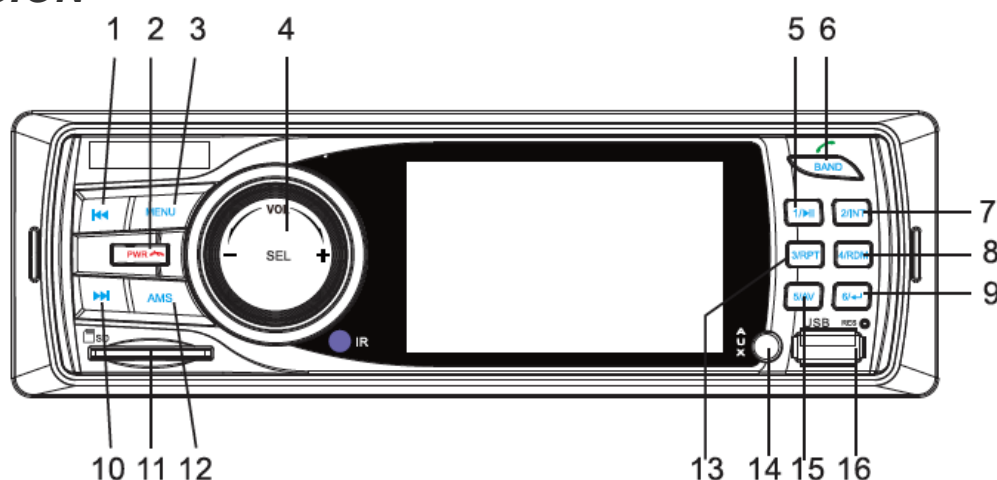

1. Anterior
2. Encender/Modo/Colgar
3. Menú
4. Control de volumen
5. Botón 1 / Play / Pausa
6. Selector de banda radial
7. Botón 2 / Introducción
8. Botón 4 / Reproducción aleatoria
9. Botón 6 / Cambio entre USB y SD
10. Siguiente
11. Ranura de tarjeta SD
12. AMS (Escaneo automático)
13. Botón 3 / Repetir
14. Entrada Auxiliar
15. Botón 5 / Cambio entre audio y video
16. Puerto USB

CONTROL REMOTO


1. Encendido
2. Modo
3. Selector de Banda /
Recepción y Reproducción
(Función Blue-Connect)
4. Volumen +
5. Anterior
6. Selección
7. Ecualizador
8. Volumen -
9. Estéreo
10. Pista 2 / Introducción
11. Pista 4 / Reproducción Aleatoria
12. Pista 5 / Botón -10
13. Silenciador / Desconectar
(Función Blue-Connect)
14. AMS (Escaneo automático)
15. Siguiente
16. Mostrar
17. Pista 3 / Repetir
18. Pista 6 / Botón +10

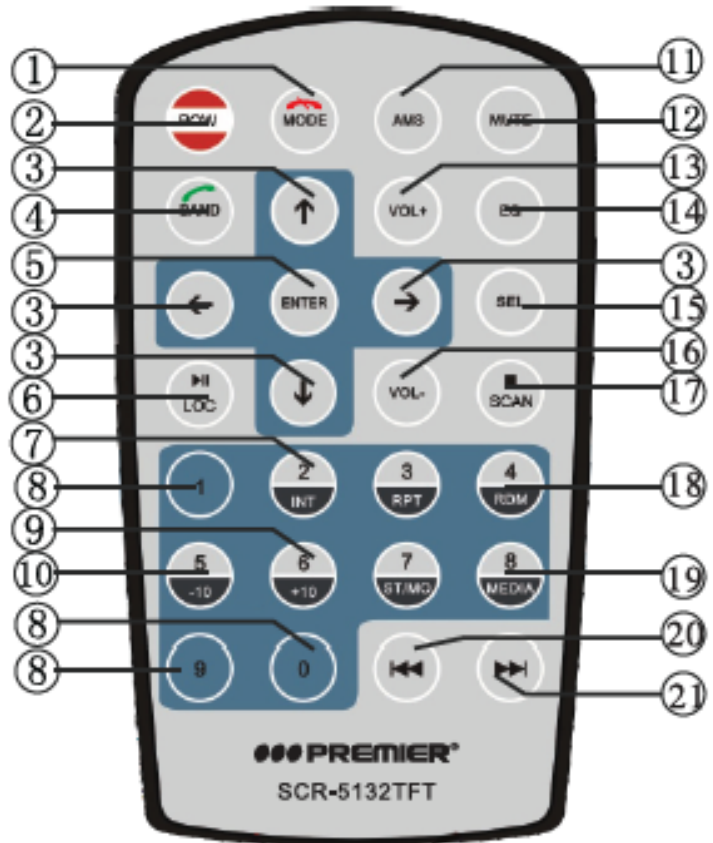

BATERÍA

Cuando observe signos de debilidad en la operación del control remoto es probable que la batería tenga poca energía y deba ser reemplazada.

1. Retire el soporte de la batería presionando y halando hacia fuera.
2. Retire la batería y coloque una nueva con la marca de polaridad positiva (+) hacia abajo.
3. Inserte la batería en el control remoto.

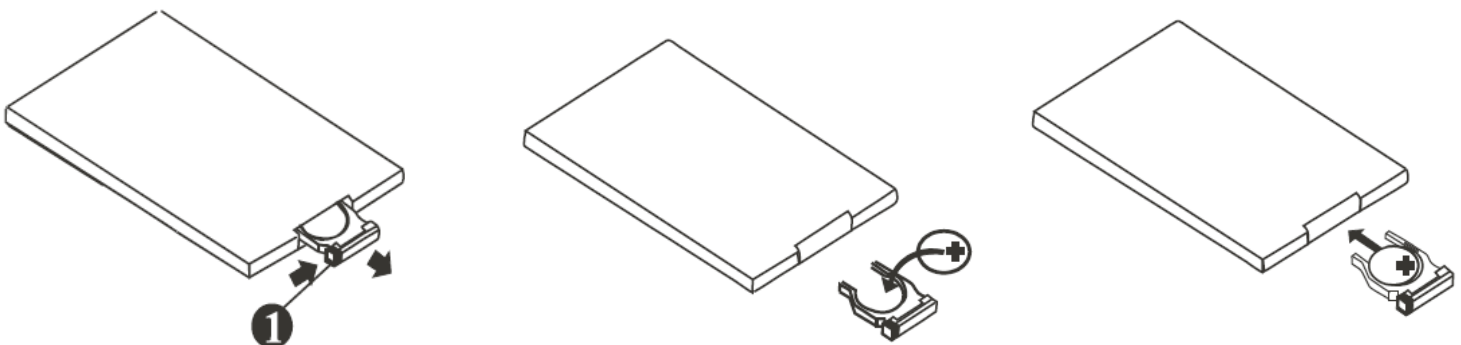

INSTRUCCIONES DE OPERACIÓN

ENCENDER/APAGAR

Presione este botón suavemente para encender la unidad; presione de nuevo para cambiar entre los modos de Radio, Reproducción y Entrada Auxiliar.

Presione este botón por 3 segundos para apagar la unidad.

ENTRADA AUXILIAR

Presione el botón Modo para ir a la función de entrada auxiliar.

USB/SD

Conecte un dispositivo USB o una tarjeta SD a la unidad para reproducir la información allí contenida de manera automática. Si tiene conectados ambos dispositivos, utilice el botón Modo para cambiar entre USB y SD. (La capacidad máxima de soporte de la unidad es de 32GB).

AMS/ESCANEO AUTOMÁTICO

Presione el botón AMS por escanear y mostrar las estaciones radiales. Mostrará las estaciones radiales guardadas en los botones 1 a 6 por 10 segundos cada una. Al presionar este botón por más de 3 segundos, la unidad iniciará la función de memoria automática; la radio seleccionará las estaciones automáticamente y las guardará en los botones numéricos.

SELECTOR DE BANDA

Presione este botón para cambiar entre las bandas radiales, en el siguiente orden: FM1, FM2, FM3, AM1, AM2. (Si no hay banda AM, se reemplaza por FM3).

SELECCIÓN DE PISTAS Y ESTACIONES RADIALES

Presione de manera prolongada los botones anterior y siguiente para desplazarse a alta velocidad a través de las pistas al igual que de las estaciones radiales. Esta es una operación manual.

Presione de manera corta los botones anterior y siguiente para desplazarse una pista tras otra, y una estación radial tras otra.

OPERACIÓN DE MP3

- Utilice los botones Anterior y Siguiente para moverse a través de las pistas.
- Utilice el botón de Repetición para repetir las pistas. Presiónelo una vez para repetir la pista en curso. Presione de nuevo para detener la función.
- Utilice el botón de Introducción para reproducir los 10 primeros segundos de las pistas. Presione de nuevo para detener la función.
- Utilice el botón de Reproducción Aleatoria para que la unidad reproduzca las pistas en un orden diferente. Presione de nuevo para detener la función.
- Utilice el botón Detener para detener la reproducción.

OPERACIÓN DE MP4

Inserte un dispositivo USB o una tarjeta SD, presione “5/AV” para ingresar al menú de video, luego presione “1/▶” la unidad reproducirá archivos MP4.


Soporta formatos 3GP/MP3/MP4/MPEG/AVI/FLV/WMA/RMV/RMVB

FUNCIÓN “BLUE-CONNECT”

Inicie la Función Blue-Connect en su teléfono celular y enlázelo con la unidad. Introduzca la contraseña 0000. Una vez la conexión sea exitosa presione el botón Modo para entrar al modo Blue-Connect. Cuando haya una llamada entrante, presione el botón de Contestar en la unidad, justo como lo haría en el teléfono celular, y para terminar presione el botón de Colgar. Para repetir una llamada presione el botón Banda.

También puede utilizar el reproductor por medio de la Función Blue-Connect. Las funciones son las mismas que las de la sección Operación de MP3.

PARTES

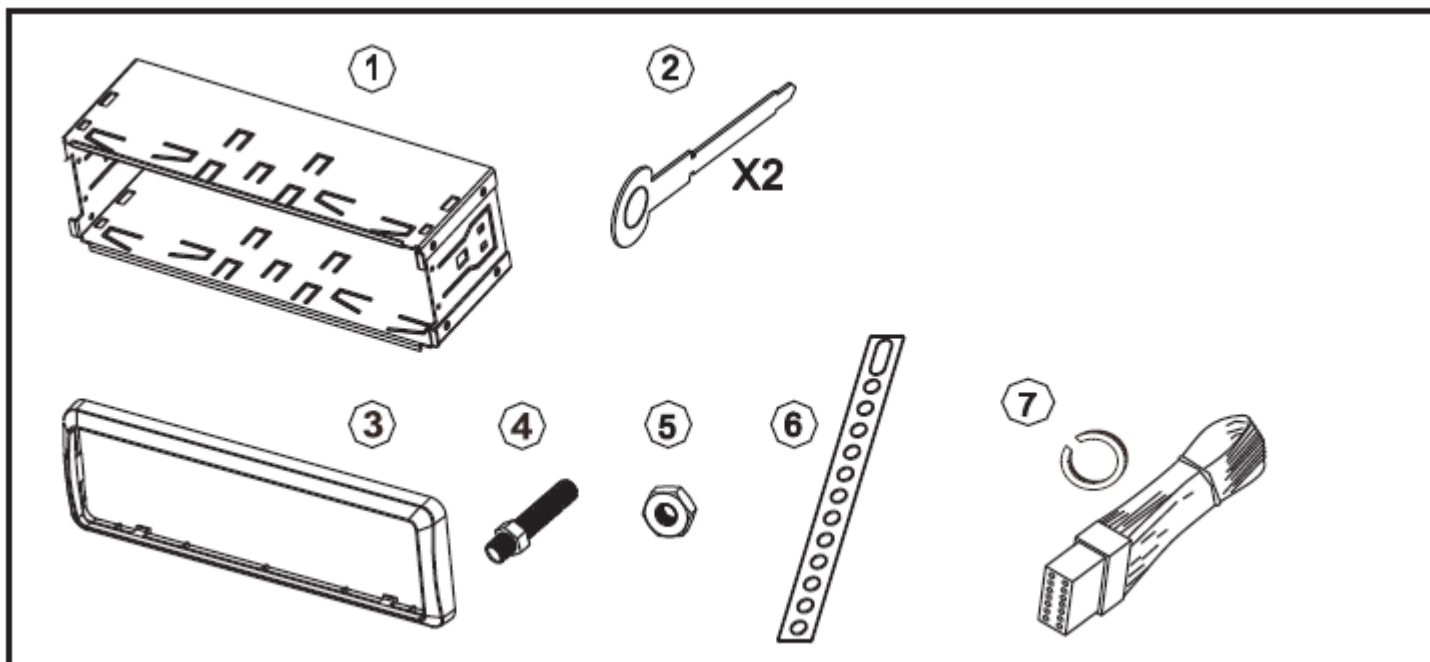

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
La unidad no enciende	<ul style="list-style-type: none"> • Verifique la conexión de los cables. • Observe si se ha quemado el fusible.
La unidad está encendida pero no hay audio	<ul style="list-style-type: none"> • Verifique la conexión de los parlantes.
La unidad quema el fusible	<ul style="list-style-type: none"> • Observe si los cables amarillo o rojo están en contacto con el chasis. • Verifique que los cables de los parlantes no estén tocando el chasis. • Verifique que el fusible sea el correcto.

ESPECIFICACIONES

GENERAL

Requerimientos de energía	12-14.4V DC
Baja impedancia	4 ohm
Controles de tono	±8dB (Graves 100Hz, Agudos 10KHz)

AUDIO

Nivel de salida máximo	1Vrms (±3dB)
Respuesta de frecuencia	20 a 20KHz
Relación señal-a-ruido	85dB
Separación	80dB
Potencia máxima de salida	4x25W

RADIO FM

Rango de sintonía	87.7 – 108 (Europa/China), 87.5 – 107.9 (EE.UU.)
Rango IF	10.7MHz
Sensibilidad utilizable (-30dB)	15dB
Relación señal-a-ruido utilizable	60dB
Separación estéreo	30dB (1KHz)
Respuesta de frecuencia	30 – 15.000Hz

RADIO AM

Rango de sintonía	522-1620 (Europa/China), 530-1710 (EE.UU.)
Sensibilidad utilizable (-20dB)	48dB
Relación señal-a-ruido utilizable	50dB
Respuesta de frecuencia	40 – 15.000Hz

-
- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.



INSTRUCTION MANUAL
CAR-AUDIO W/LCD & VIDEO(3")
SCR-5132TFT



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to **info@premiermundo.com**



PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com


NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Note on installation


- The unit is designed for 12-14V DC, negative ground operation system only .Before installing the unit.
- Make sure your vehicle is connected to DC 12V negative ground electrical system.
- The negative battery terminal must be disconnected before making connections, which can reduce the damaging the unit due to short circuit.
- Be sure to connect the color coded leads correctly according to the diagram .Incorrect connections may cause the unit malfunction or damage the vehicle's electrical system.
- Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body.
- Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.
- After the completion, of the installation and begin to play the unit (including replacing the battery), please press the reset button on the front panel with pointed objects (such as ball-point pen) to set the unit to initial status.

Specifications Of Common Keys

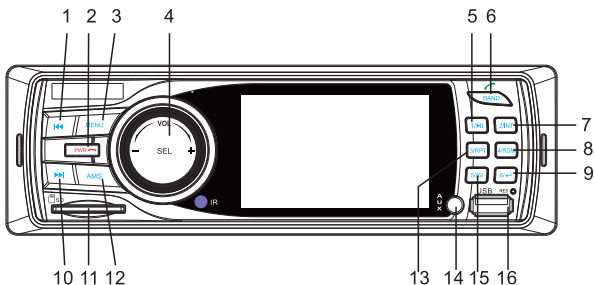

1. Prev
2. Power/Mode/Hang up
3. Menu
4. Volume control
5. 1/play & pause
6. Radio Band Selection(short press in radio station)
When playing video,Short press BAND button on remote control,
it can transform the system between PAL and NTSC;
when playing video, short press BAND button on front panel,its has OSD function.
- 7.2/INT
8. 4/RDM(Random Play)
9. 6/ Switch the playing between USB and SD card.
10. Next
11. SD card slot
- 12.AMS(Auto Scan And Auto Store)
13. 3/RPT(Repeating The Same Track)
14. AUX IN
15. 5/AV(Switching audio and video files in the USB or SD card)
- 16.USB port

Location of the remote control

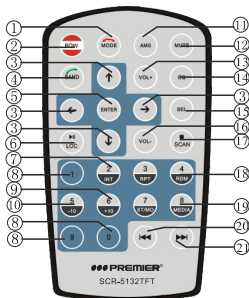


1. Mode switch/
Disconnect button (for Blue-connect function)
2. Power
3. Direction button
4. Band switch
Receive/playback (for Blue-connect function)
5. Enter
6. Play/pause & radio far and near path selection
7. Track 2/INT Playing
8. Number button
9. Track 6/+10
10. Track 5/-10
11. Auto scan and auto store
12. Mute sound
13. Volume+
14. EQ switch
15. Selection
16. Volume -
17. Stop/scan
18. Track 4/random play
19. Track 8/media
20. Previous track
21. Next track


Replacing the Battery

★ When the range of the operation of the card remote control becomes short or no functions while operating. Replace the battery with a new button cell. Make sure the battery polarity before replace.


1. Pull out the battery holder while pressing the shopper ①

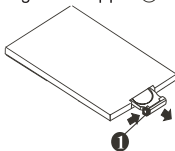

2. Put the button-type battery (+) mark upward into the battery holder.

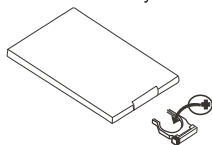

3. Insert the battery holder into the remote control.

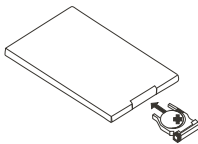

★ Note: Some models are not equipped with remote control, you should ignore the contents about remote control.

Basic Operation

Power On/Off/Mode

- 1.Preset (PWR) button to turn on the unit,and press power for 3 seconds to turn off the unit
2. Press (power/mode)smoothly to turn on the unit ,and the press again to change the function :Radio→Playback→AUX-IN

Aux In Operation

Press MODE button to enter into AUX mode .It in put the AUDIO signal from 3 position .The signal displays on the LCD and there is signal output in the speaker .

U-DISK/SD Card Playback

- 1.Insert U Disk /SD card into USB/SD port ,U disk /SDwill play automatically.Or press MODE button to select if U-dick/SD is loaded.
- 2.Other operations please refer to details of MP3 Playback.
- 3.USB/SD device can support max 32GB memory

Preset station / AMS

AMS:Automatic Scan /Memory station

Press AMS button to scan /display the memory station by 10 seconds from 1-6 station ,when start AMS function, the frequency flashes continuously until the appropriate station, then play the radio station by press 1-6 number key accordingly.

When press AMS up than 3 seconds, will start the auto memory function, the radio will select the station automatically and store it on the number buttons. Remark: The machine at most store 6 stations per each frequency, pls refer to the number button operation to use the number key.

Band selector

Each time this button is pressed, the radio band is changed. The indication "FM1" "FM2" "FM3" "AM1" "AM2"will appear on the display according to your selection.

Without "AM", is "FM1" "FM2" "FM3".

Tuning/Selecting Tracks

• Long press

Manual Tuning : press(+||| or |||-)button continuously to select a station upward or downward respectively.

• Short press

Automatically Tuning: press(+||| or |||-)button the radio automatically searches a station upward or downward respectively and plays when it finds a station.

MP3 OPERATION

1. Selecting Track/ F. F/REW

Press (⏮ or ⏭) choose your favorite track upward or downward respectively. Press and hold (⏮ or ⏭) button to fast forward or rewind the track upward or downward respectively.

2. Playing Tracks Repeatedly (By remote control)

Press "RPT" button to perform repeat playing function when you need to repeat playing the track you like.

During MP3 version, Press "RPT" button at the first time to repeat playing at the same track. "RPT" appears which indicates repeat playing one track starts. Press "RPT" button again to stop repeat.

During MP3 version, Press "RPT" button at the first time to repeat playing the same track "RPT" appears which indicates repeat playing one track starts.

Press "RPT" button at the second time to stop repeat.

3. Scanning Tracks Automatically (By remote control)

During playback, press "RPT" button, to play the first 10 seconds of each track on the disc, the display will show "INT", ON Which indicates INT function is already activated.

Press "INT" button once more to revert to normal play back, Display will show "INT OFF"

4. Playing Tracks in Random Order (By remote control)

During playback, press "RDM" button, and "RDM" on appears on the display which indicates RDM function is carried out, The unit plays and track at random, Press RDM once more to return to normal playback mode.

5. Stop Playing

During playback, press "stop" on remote button to stop the playback, LCD will show "stop" to return to normal play mode, press play.

note: during Mp3 mode, press STOP on remote button to stop playing. LCD appears STOP.

BLUE-CONNECT FUNCTION

Firstly open Blue-connect from mobilephone and matching with unit, input password: 0000. After matching successful, press "MOD" to enter "Blue-connect" state

1. Blue-connect mobile phone function

1) when there is an incoming call, "calling" appears on the display, you can press BAND button to answer a call, it is hand-free state. to end a call, you can just press the "PWR" button;

2) If you want to make a repeat call, pls long press "BAND" button.

2. Blue-connect Audio player


Operate the Blue-connect audio player to start playback on the unit. The basic operations are same with above MP3 operation: Mutes the sound, reverse skips or forward skips etc.

MP4 PLAYBACK

Insert USB or SD card, Press "5/AV" enter into the video menu, Then press "1/▶" will play Mp4 accordingly.

SUPPORT 3GP/MP3/MP4/MPEG/AVI/FLV/WMA/RMVB/FORMAT

Parts List (The numbers in the list are keyed to those in the instructions.)

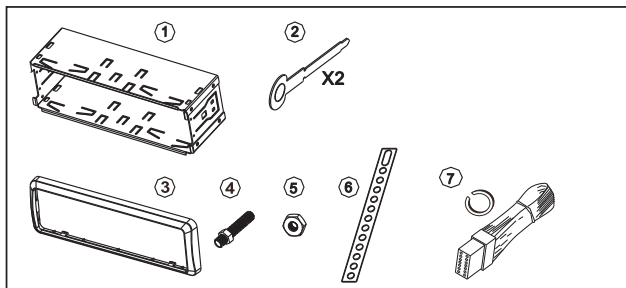

Trouble shooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage	Check connections for proper voltage (12-14.4VDC)
	Red wire not connected or incorrect voltage	
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
Excessive skipping	Unit is not mounted correctly or back strap is not secure	Check mounting sleeve and back strap support

Specification

General

Power requirements.....	12-14.4V DC
Load impedance.....	4 Ω
Tone controls.....	± 8 dB(bass 100Hz,Treble 10KHz)

Audio section

Maximum output level.....	1Vrms(+/-3dB)
Frequency response.....	20 to 20Khz
Signal-to-noise ratio.....	85dB
Separation.....	80dB
Max.audio output power.....	4X25W

FM Tuner section

Tuning range.....	87.7-108(Europe/china),87.5-107.9(U.S.A)
IF Range.....	10.7MHz
Usable sensitivity(-30dB).....	15dB
Usable-to-noise radio.....	60dB
Stereo separation.....	30dB(1 KHz)
Frequency response.....	30~15000Hz

AM Tuner section(optional)

Tuning range.....	522-1620(Europe/china),530-1710(U.S.A)
Usable sensitivity(-20dB).....	48dB
Usable-to-noise radio.....	50dB
Frequency response.....	40~15000Hz

★ *Note: Due to continuous product improvement, specifications and design are subject to change without notice.*